



REED HANDLE

TECHNICAL DETAILS

All measurements in mm.

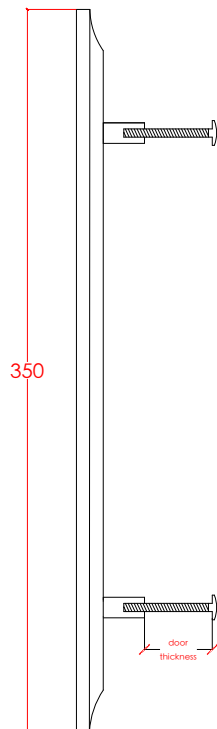

- Please advise door thickness when making the order to select the correct length of machine screw.
- All supplied with m4 brass pan head screw.

CARE INSTRUCTIONS

- **Timber** - can be cleaned with a damp or dry cloth. Do not use any chemical products.
- **Metal** - (live finishes) Although we prefer the live finishes to age naturally, there are ways you can clean and re-polish. (please remove from doors if doing any of the procedures described)
 1. **Waxed Satin Brass** -We create this finish by hand, using fine abrasive pads. The metal is then heated and given a coat of protective wax. With time and use the finish will react to its environment and develop its own patina. They can be returned to their original look by cleaning with an abrasive pad such as those made by Scotchbrite (we use a VFN-A grade which is maroon in colour). A coat of wax will re-protect the surface after cleaning.
 2. **Bronze Patinated Brass.** -This finish is achieved by patinating the metal and then relieving the finish by hand with gentle abrasive pads to accentuate the highlights. They are then heated and finished with a coat of wax which improves the lustre and provides some initial protection. They can be cleaned with mild detergent and a non-abrasive cloth and then re-waxed... or just left to do their own thing, it's up to you.